

PREFACE

This manual covers the construction, function and serving procedures for the Honda BF135A•BF150A outboard motors.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at anytime without notice.


No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher. This includes text, figures, and tables.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. The purpose of this message is to help prevent damage to the outboard motor, other property, or the environment.


SAFETY MESSAGES


Your safety, and the safety of others, are very important. To help you make informed decisions, we have provided safety messages and other safety information throughout this manual. Of course, it is not practical or possible to warn you about all the hazards associated with servicing these outboard motors. You must use your own good judgment.


You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the engine cover.
- **Safety messages** — Preceded by a safety alert symbol  and one of three signal words, DANGER, WARNING, or CAUTION.

These signal words mean:

 DANGER You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

 WARNING You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

 CAUTION You CAN be HURT if you don't follow instructions.

- **Instructions** — how to service this outboard motor correctly and safely.

**Honda Motor Co., Ltd.
Service Publications Office**

CONTENTS

SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
ENGINE COVER/COVER LOCK	4
PROGRAMMED-FUEL INJECTION	5
ALTERNATOR	6
ENGINE REMOVAL/INSTALLATION	7
THERMOSTAT/RELIEF VALVE/FLUSH VALVE	8
CRANKSHAFT PULLEY/CAM CHAIN	9
CYLINDER HEAD/VALVES	10
OIL PUMP/FLYWHEEL	11
CRANKCASE/BALANCER	12
CYLINDER BLOCK/CRANKSHAFT/PISTONS	13
PROPELLER/GEAR CASE/EXTENSION CASE/OIL CASE	14
MOUNTING CASE/STERN BRACKET/SWIVEL CASE/POWER TRIM/TILT ASSEMBLY	15
STEERING ROD/REMOTE CONTROL BOX	16
CABLES/SHIFT LINK BRACKET/SHIFT ARM/NEUTRAL SWITCH	17
ELECTRICAL EQUIPMENT	18
OPERATION	19
SYSTEM DIAGRAM/WIRING DIAGRAM	20