

PREFACE

This manual covers the construction, function and servicing procedures of the Honda BF20A/BF25A outboard motors.

Careful observance of these instructions will result in better, safer service work.

Illustrations in this manual are based primarily on the BF25A LRS.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE

CONTENTS

SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
ENGINE COVER/THROTTLE/CHOKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
RECOIL STARTER (TILLER HANDLE TYPE ONLY)	7
ENGINE REMOVAL/INSTALLATION	8
WATER JACKET COVER/THERMOSTAT/ THERMO SWITCH	9
CYLINDER HEAD/VALVES/OIL PUMP	10
CRANKCASE/CYLINDER BLOCK/ CRANKSHAFT/PISTON	11
PROPELLER/GEAR CASE/ EXTENSION CASE	12
OIL PAN/ENGINE UNDER CASE/ SWIVEL CASE	13
STEERING LINK ARM/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE CABLE RACKET/SHIFT LEVER/ TILLER HANDLE (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17
WIRING DIAGRAM	18
BF30 SUPPLEMENT	