

REMOVING A DISPENSER, THE FRESH FILL INLET VALVE, AND THE LID LOCK

WARNING




Electrical Shock Hazard

Disconnect power before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.



1. Unplug washer or disconnect power
2. Raise the washer lid.

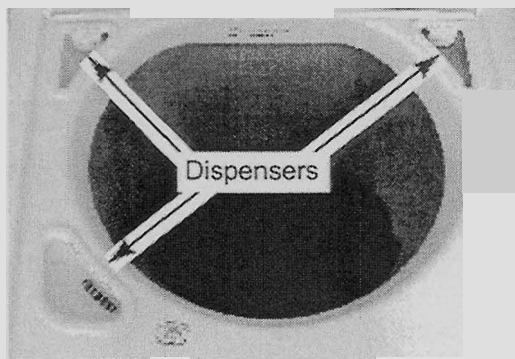


NOTE: The removal procedure for the three dispensers is the same so only one will be shown removed.

3. To remove a dispenser:

- a) Use a small screwdriver and pry out on the three dispenser cover tabs while you lift the cover off the dispenser (see the top right photo).

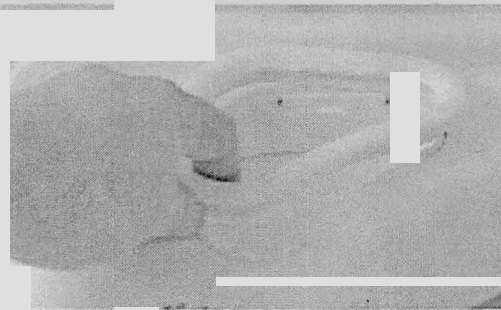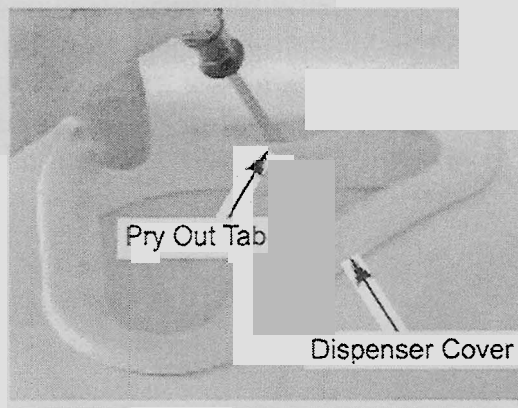

- b) Squeeze the bottom of the dispenser, and release the hooked segments at the top of the dispenser from the cabinet, then push the dispenser out of its cutout.

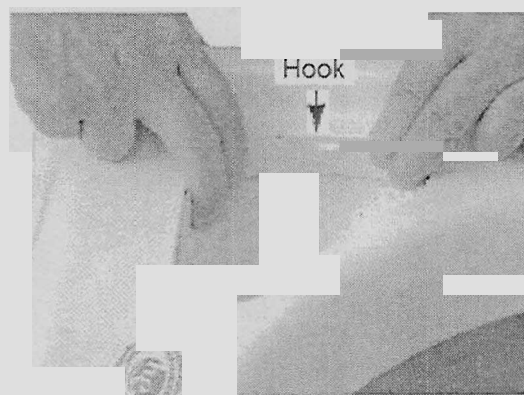

Continued on the next page.