
TABLE OF CONTENTS

SAFETY NOTICE	VIII
INTRODUCTION	IX
VEHICLE SERIAL NUMBER LOCATION	IX
ENGINE SERIAL NUMBER LOCATION	IX
ARRANGEMENT OF THE MANUAL	IX
LIST OF ABBREVIATIONS USED IN THIS MANUAL	X
GENERAL INFORMATION	XIII
ILLUSTRATIONS AND PROCEDURES	XIII
SELF-LOCKING FASTENERS PROCEDURE	XIII
LOCTITE® APPLICATION PROCEDURE	XIII
TIGHTENING TORQUES	XVI
01 MAINTENANCE	
01 – MAINTENANCE CHART	1
NOISE EMISSION CONTROL SYSTEM REGULATION	1
EMISSION REQUIREMENTS	1
MAINTENANCE CHART	2
02 – MAINTENANCE	5
SPECIAL PROCEDURES	5
AIR BOX	6
AIR FILTER	6
BOLTS, FASTENERS AND NUTS	7
ENGINE OIL AND FILTER	7
ENGINE OIL PRESSURE REGULATOR	9
OIL STRAINER	9
SPARK ARRESTER	9
TIRES AND WHEELS	10
ENGINE AREA	10
VEHICLE CLEANING	10
03 – STORAGE/PRESEASON PREPARATION	11
STORAGE	11
FUEL STABILIZER	11
ENGINE LUBRICATION	11
RAGS INTO INLET AND OUTLET HOSES OF CVT	12
VEHICLE CLEANING AND PROTECTION	12
COOLANT DENSITY	13
PRESEASON PREPARATION	14
02 ENGINE	
01 – TROUBLESHOOTING	17
COOLING SYSTEM	17
MAGNETO SYSTEM	17
LUBRICATION	18
CYLINDER AND HEAD	19
CRANKSHAFT	20
GEARBOX	20
CVT	21
ENGINE GENERAL	23
02 – LEAK TEST	27
VERIFICATION	27
LEAK TEST PROCEDURE	27