

2008 Honda Civic GX

2006-08 BRAKES ABS System - Civic (All Except Hybrid)

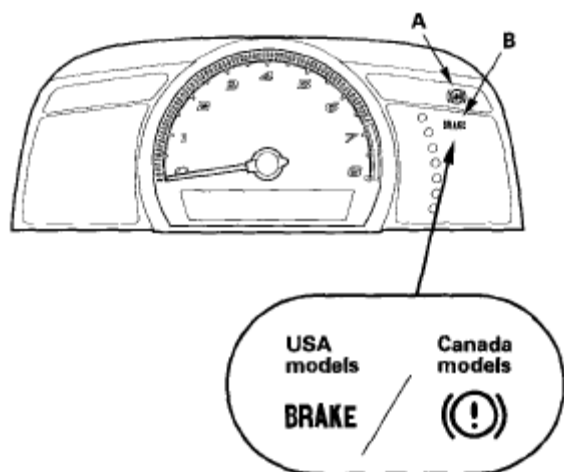


Fig. 2: Identifying ABS And Brake System Indicators

When the system is OK, each indicator comes on for about 2 seconds after turning the ignition switch ON (II), then goes off.

When the system detects a problem, a DTC will be set and, depending upon the failure, the ABS modulator-control unit will determine which indicator(s) will be turned on. If the problem goes away (system returns to normal), the indicator(s) will be controlled in the following way depending upon the DTC that was set:

- The indicator(s) will come on and stay on when the ignition switch is ON (II).
- The indicator(s) will automatically go off.
- The indicator(s) will go off after the vehicle is driven.

ABS Indicator

The ABS indicator comes on when the ABS function is lost. The brakes still work like a conventional system.

Brake System Indicator

The brake system indicator comes on when the EBD function is lost, the parking brake is applied, and/or the brake fluid level is low.

NOTE: If two or more wheel sensors fail, the brake system indicator will come on.