

## Replacing the Display

1. After connecting the display cables, position the display into the rear housing. Place the display into the rear housing, sliding it into position, pushing it in the direction of the arrows. **Note:** The display mates with tabs/slots in the rear housing. If the display doesn't fit properly and you can't install the three screws along the bottom of the housing, check that the display is properly seated in the rear housing.



2. Holding onto the display, turn it over and lay the display face down on a soft cloth. Push the rear housing in the direction of the arrows. This will mate the housing and display tabs.

