

1. SPECIFICATIONS	1-1	5. PROGRAMMED FUEL INJECTION (PGM-FI)	5-1
1. SPECIFICATIONS	1-1	1. SERVICE PRECAUTIONS	5-1
2. DIMENSIONAL DRAWING	1-4	2. VACUUM CONNECTION	5-3
2. SERVICE INFORMATION	2-1	3. CARCUI DIAGRAM	5-4
1. SYMBOLS USED IN THIS MANUAL	2-1	4. TROUBLESHOOTING	5-6
2. SERIAL NUMBER LOCATION.....	2-1	PROGRAMMED FUEL INJECTION SYSTEM	
3. MAINTENANCE STANDARDS	2-2	(PGM-FI SYSTEM).....	5-10
4. TORQUE VALUES	2-6	• ECM TERMINAL ARRANGEMENT.....	5-10
5. SPECIAL TOOLS	2-8	• TROUBLESHOOTING GUIDE	5-14
6. TROUBLESHOOTING	2-13	TROUBLESHOOTING CHART	
• ENGINE.....	2-13	a. ECM.....	5-16
a. HARD STARTING.....	2-13	b. HO2S.....	5-26
CYLINDER COMPRESSION TEST	2-14	c. MAP SENSOR.....	5-28
b. ENGINE DOES NOT RUN		d. TDC SENSOR 1, 2/CKP SENSOR.....	5-30
SMOOTHLY.....	2-15	e. ECT SENSOR	5-31
c. IGNITION (POWER) SYSTEM.....	2-19	f. TP SENSOR	5-33
d. STARTER MOTOR	2-22	g. IAT SENSOR	5-35
e. IGNITION SYSTEM	2-24	h. BARO SENSOR.....	5-37
• FRAME.....	2-27	i. KNOCK SENSOR	5-39
a. SHIFT.....	2-27	j. OIL PRESSURE SWITCH	
b. POWER TRIM/TILT ASSEMBLY		(HIGH PRESSURE SIDE)	5-40
DOES NOT MOVE	2-28	k. HO2S (HEATER).....	5-41
c. POWER TRIM/TILT ASSEMBLY		VTEC SYSTEM	5-43
DOES NOT HOLD	2-29	TROUBLESHOOTING CHART	
7. CABLE/HARNESS ROUTING.....	2-31	a. VTEC SYSTEM.....	5-43
8. TUBE ROUTING	2-43	IDLE CONTROL SYSTEM	5-44
9. LUBURICATION.....	2-50	TROUBLESHOOTING GUIDE	5-44
3. MAINTENANCE	3-1	TROUBLESHOOTING CHART	
1. MAINTENANCE SCHEDULE	3-1	a. IAC VALVE	5-45
2. ENGINE OIL.....	3-2	b. ALTERNATOR FR TERMINAL	
3. OIL FILTER	3-3	SIGNAL	5-47
4. GEAR CASE OIL	3-4	ALERT SYSTEM	5-49
5. SPARK PLUGS.....	3-5	TROUBLESHOOTING CHART	
6. VALVE CLEARANCE	3-6	a. CONTINUOUS SOUND.....	5-49
7. THERMOSTAT	3-9	b. INTERMITTENT SOUND	
8. FUEL STRAINER (LOW PRESSURE SIDE)/		(LONG BEEP)	5-53
WATER SEPARATOR.....	3-10	c. INTERMITTENT SOUND	
9. FUEL STRAINER (HIGH PRESSURE SIDE) ...	3-15	(SHORT BEEP)	5-55
10. IDLING	3-16	d. OVERHEAT SENSORS 1, 2	5-56
11. THROTTLE CONTROL		FUEL SUPPLY SYSTEM.....	5-58
CABLE/THROTTLE LINK	3-18	TROUBLESHOOTING GUIDE	5-58
12. SHIFT CONTROL CABLE	3-21	TROUBLESHOOTING CHART	
13. TIMING BELT.....	3-22	a. PGM-FI MAIN RELAY	5-59
14. ALTERNATOR BELT	3-24	b. FUEL INJECTOR POWER LINE	5-63
4. ENGINE COVER/COVER LOCK	4-1	c. FUEL LINE CUT SOLENOID VALVE....	5-64
1. ENGINE COVER	4-2	INTAKE AIR SYSTEM.....	5-66
2. FRONT SEPARATE COVER.....	4-3	TROUBLESHOOTING CHART	
3. ELECTRIC PARTS COVER	4-4	a. INTAKE AIR BYPASS (IAB)	
4. LEFT/RIGHT ENGINE UNDER COVER	4-5	CONTROL CIRCUIT	5-66
5. COVER LOCK CABLE/ENGINE		5. FUEL LINES	5-69
COVER BRACKET.....	4-10	• HOW TO RELIEVE FUEL PRESSURE	5-69
6. FRONT LOCK ASSEMBLY/FRONT COVER		• FUEL PRESSURE MEASUREMENT	5-69
BRACKET	4-15	• FUEL LINES	5-70
		• FUEL LINE CUT SOLENOID VALVE.....	5-71
		6. FUEL INJECTORS/	
		PRESSURE REGURATOR	5-72
		• FUEL INJECTORS	5-72
		• PRESSURE REGURATOR	5-73
		7. FUEL PUMP (HIGH PRESSURE SIDE)/	
		VAPOR SEPARATOR	5-81
		8. FUEL PUMP (LOW PRESSURE SIDE).....	5-94