

9. OIL PRESSURE SWITCH (HIGH PRESSURE SIDE).....	5-96	6. CRANKCASE COVER/CRANKSHAFT/ PISTON REASSEMBLY.....	11-23
10. OIL PRESSURE SWITCH (LOW PRESSURE SIDE).....	5-97	<b>12. PROPELLER/GEAR CASE/EXTENSION CASE...</b>	<b>12-1</b>
11. KNOCK SENSOR.....	5-98	1. PROPELLER.....	12-2
12. ECT SENSOR.....	5-98	2. GEAR CASE ASSEMBLY.....	12-3
13. OVERHEAT SENSOR 1, 2.....	5-98	3. WATER PUMP/SHIFT ROD.....	12-9
14. IAC VALVE.....	5-99	4. PROPELLER SHAFT HOLDER ASSEMBLY...	12-19
15. IAT SENSOR.....	5-99	5. PROPELLER SHAFT/PROPELLER SHAFT HOLDER.....	12-20
16. MAP SENSOR.....	5-99	6. VERTICAL SHAFT/BEVEL GEAR.....	12-35
17. HO2S.....	5-100	7. SHIM SELECTION.....	12-46
18. BARO SENSOR.....	5-100	8. SHIM POSITION.....	12-54
19. CKP SENSOR.....	5-101	9. BACKLASH ADJUSTMENT.....	12-56
20. TDC SENSOR 1, 2.....	5-101	10. LOWER RUBBER MOTOR MOUNT EXTENTION CASE/UNDERCOVER.....	12-59
21. VTEC SYSTEM(BF225A).....	5-102	<b>13. OIL PAN/MOUNT CASE.....</b>	<b>13-1</b>
22. SILENCER CASE.....	5-103	1. OIL PAN/EXHAUST PIPE/WATER TUBE.....	13-2
23. THROTTLE BODY.....	5-107	2. MOUNT CASE/UPPER MOUNT RUBBER/ SHIFT SHAFT A, B.....	13-5
24. INTAKE MANIFOLD.....	5-112	<b>14. SWIVEL CASE/POWER TRIM/ TILT ASSEMBLY.....</b>	<b>14-1</b>
25. EXHAUST MANIFOLD.....	5-117	1. SWIVEL CASE/STERN BRACKET ASSEMBLY REMOVAL/INSTALLATION.....	14-2
<b>6. ALTERNATOR/TIMING BELT/PULLEYS.....</b>	<b>6-1</b>	2. POWER TRIM/TILT ASSEMBLY/STERN BRACKET/SWIVEL CASE ASSEMBLY.....	14-3
1. ALTERNATOR.....	6-2	3. MOUNT FRAME.....	14-10
2. TIMING BELT/TIMING BELT DIRVE PULLEY/ DRIVEN PULLEYS.....	6-15	4. POWER TRIM/TILT ASSEMBLY.....	14-17
<b>7. EIGINE REMOVAL/INSTALLATION.....</b>	<b>7-1</b>	5. POWER TILT MOTOR ASSEMBLY.....	14-31
1. REMOVAL.....	7-2	<b>15. STEERING ROD/REMOTE CONTROL BOX.....</b>	<b>15-1</b>
2. EXPLODED VIEW.....	7-7	1. STEERING ROD (OPTIONAL PART).....	15-1
3. INSTALLATION.....	7-8	2. REMOTE CONTROL BOX (OPTIONAL PART).....	15-2
<b>8. WATER JACKET/RELIEF VALVE/ FLUSH VALVE.....</b>	<b>8-1</b>	3. CONTROL PANEL (OPTIONAL PART).....	15-7
1. WATER LINE DESCRIPTION.....	8-2	4. INSPECTION.....	15-9
2. WATER JACKET.....	8-3	<b>16. CABLES/SHIFT LINK BRACKET/SHIFT ARM....</b>	<b>16-1</b>
3. RELIEF VALVE.....	8-4	1. REMOTE CONTROL CABLE (SHIFT SIDE/THROTTLE SIDE).....	16-2
4. FLUSH VALVE.....	8-5	2. THROTTLE ARM/SHIFT LINK BRACKET.....	16-5
<b>9. CYLINDER HEAD/VALVES.....</b>	<b>9-1</b>	3. SHIFT ARM/LINK ROD/NEUTRAL SWITCH...	16-9
1. CYLINDER HEAD ASSEMBLY.....	9-2	<b>17. ELECTRICAL EQUIPMENT.....</b>	<b>17-1</b>
2. CYLINDER HEAD DISASSEMBLY.....	9-5	1. COMPONENT LOCATION.....	17-1
3. INSPECTION.....	9-8	2. PGM-FI MAIN RELAY/ POWER TILT RELAY.....	17-8
4. VALVE GUIDE REPLACEMENT.....	9-16	3. ECM.....	17-12
5. VALVE SEAT RECONDITIONING.....	9-18	4. STARTER MOTOR.....	17-13
6. CYLINDER HEAD REASSEMBLY.....	9-20	5. ACG FUSE BOX/FUSE BOX.....	17-21
7. CYLINDER HEAD ASSEMBLY INSTALLATION.....	9-24	6. SWITCH PANEL AND INDICATOR WIRE HARNESSSES.....	17-24
<b>10. FLYWHEEL/OIL PUMP.....</b>	<b>10-1</b>	7. INSPECTION.....	17-28
1. REMOVAL.....	10-2	<b>18. OPERATION.....</b>	<b>18-1</b>
2. OIL PUMP DISASSEMBLY.....	10-4	1. PROGRAMMED FUEL INJECTION SYSTEM (PGM-FI).....	18-1
3. INSPECTION.....	10-5	<b>19. WIRING DIAGRAM.....</b>	<b>19-1</b>
4. EXPLODED VIEW.....	10-7		
5. INSTALLATION.....	10-8		
<b>11. CYLINDER BLOCK/CRANKSHAFT/PISTON.....</b>	<b>11-1</b>		
1. OIL FILLER EXTENSION.....	11-2		
2. CRANKCASE COVER/CRANKSHAFT/ PISTON DISASSEMBLY.....	11-3		
3. INSPECTION.....	11-7		
4. BEARING SELECTION.....	11-15		
5. EXPLODED VIEW.....	11-19		