

---

# TABLE OF CONTENTS

---

<b>SAFETY NOTICE</b> .....	<b>VIII</b>
<b>INTRODUCTION</b> .....	<b>IX</b>
GENERAL INFORMATION.....	IX
HULL IDENTIFICATION NUMBER (H.I.N.) .....	IX
ENGINE IDENTIFICATION NUMBER (E.I.N.) .....	X
ARRANGEMENT OF THIS MANUAL, ILLUSTRATIONS AND PROCEDURES .....	X
ENGINE EMISSIONS INFORMATION .....	XIV
WORKING ON WATERCRAFT .....	XIV
SELF-LOCKING FASTENERS PROCEDURE .....	XIV
LOCTITE APPLICATION PROCEDURE.....	XV
TIGHTENING TORQUES .....	XIX
<b>01 MAINTENANCE</b> .....	
<b>01 – MAINTENANCE CHART</b> .....	<b>1</b>
<b>02 – PRESEASON PREPARATION</b> .....	<b>3</b>
<b>03 – STORAGE PROCEDURES</b> .....	<b>5</b>
PROPULSION SYSTEM.....	5
FUEL SYSTEM .....	5
ENGINE .....	6
ELECTRICAL SYSTEM .....	7
VEHICLE .....	7
CHECKLIST.....	8
<b>04 – SPECIAL PROCEDURES</b> .....	<b>9</b>
TOWING THE WATERCRAFT IN WATER.....	9
SUBMERGED WATERCRAFT .....	9
WATER-FLOODED ENGINE .....	10
<b>02 TROUBLESHOOTING</b> .....	
<b>01 – TROUBLESHOOTING CHART</b> .....	<b>13</b>
ENGINE .....	13
STARTING SYSTEM.....	22
ELECTRICAL SYSTEM.....	23
PROPULSION .....	24
STEERING SYSTEM.....	24
<b>03 ENGINE</b> .....	
<b>01 – ENGINE REMOVAL AND INSTALLATION</b> .....	<b>25</b>
GENERAL.....	25
PROCEDURES .....	25
ENGINE REMOVAL .....	25
CLEANING .....	29
INSTALLATION .....	29
ENGINE ALIGNMENT.....	29
<b>02 – ENGINE LEAK TEST</b> .....	<b>33</b>
PREPARATION .....	33
PROCEDURE .....	34
<b>03 – AIR INTAKE SYSTEM</b> .....	<b>37</b>
INSPECTION.....	39
REMOVAL .....	39
INSTALLATION .....	40
<b>04 – INTAKE MANIFOLD AND INTERCOOLER</b> .....	<b>41</b>
PROCEDURES .....	45
INTAKE MANIFOLD.....	45
INTERCOOLER.....	50