

Reversing Mechanism Motor

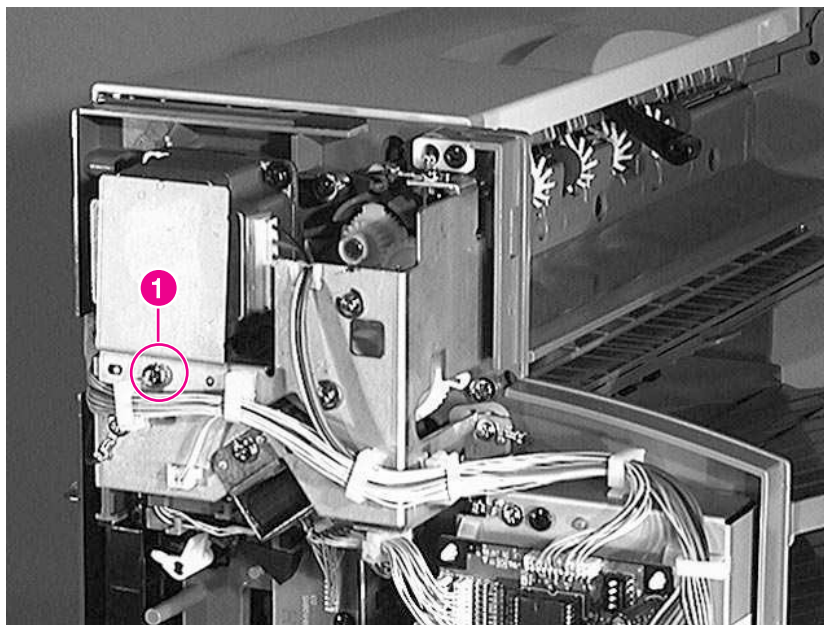


Figure 6-140 Reversing Mechanism Motor (1 of 2)

- 1 Remove the Back Cover (page 302).
- 2 Remove 1 screw from the metal plate (callout 1).