


GLASS/WINDOWS/MIRRORS

1. Use an awl to saw through the sealant, except where there are fasteners and spacers, from the inside of the vehicle.

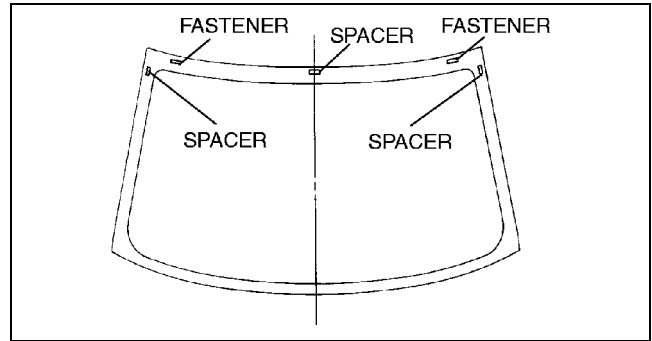


X3U912WAS

2. Pass the **SST** (piano wire) through the hole.

Warning

- Using a **SST** (piano wire) with bare hands can cause injury. Always wear gloves when using a **SST** (piano wire).

3. Wind each end of the wire around a bar.

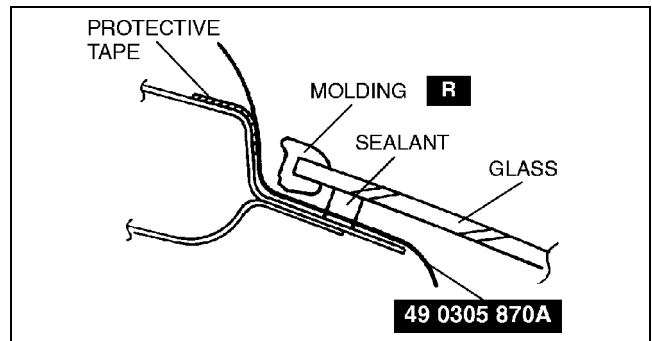


X3U912WAT

4. Working with another person, saw through the sealant around the edge of the glass, being careful not to damage the body.

Note


- Use a long sawing action to spread the work over the whole length of the **SST** (piano wire) to prevent it from breaking.

5. Remove the rear window glass.

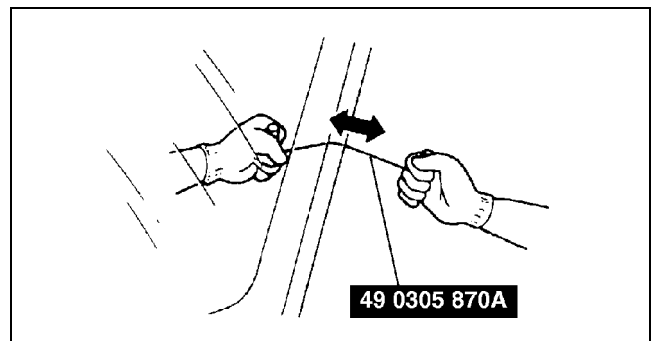

X3U912WAU

6. Remove the spacers and fasteners.
7. Remove the rear window molding from the rear window glass.

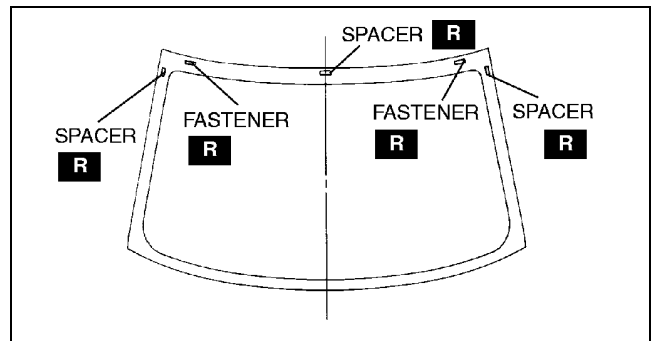

X3U912WAV

5HB

1. Remove the rear wiper arm and blade. (See 09–19–12 REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
2. Remove the liftgate trim.
3. Remove the rear spoiler.